


15. RV360 SPARE PARTS LIST

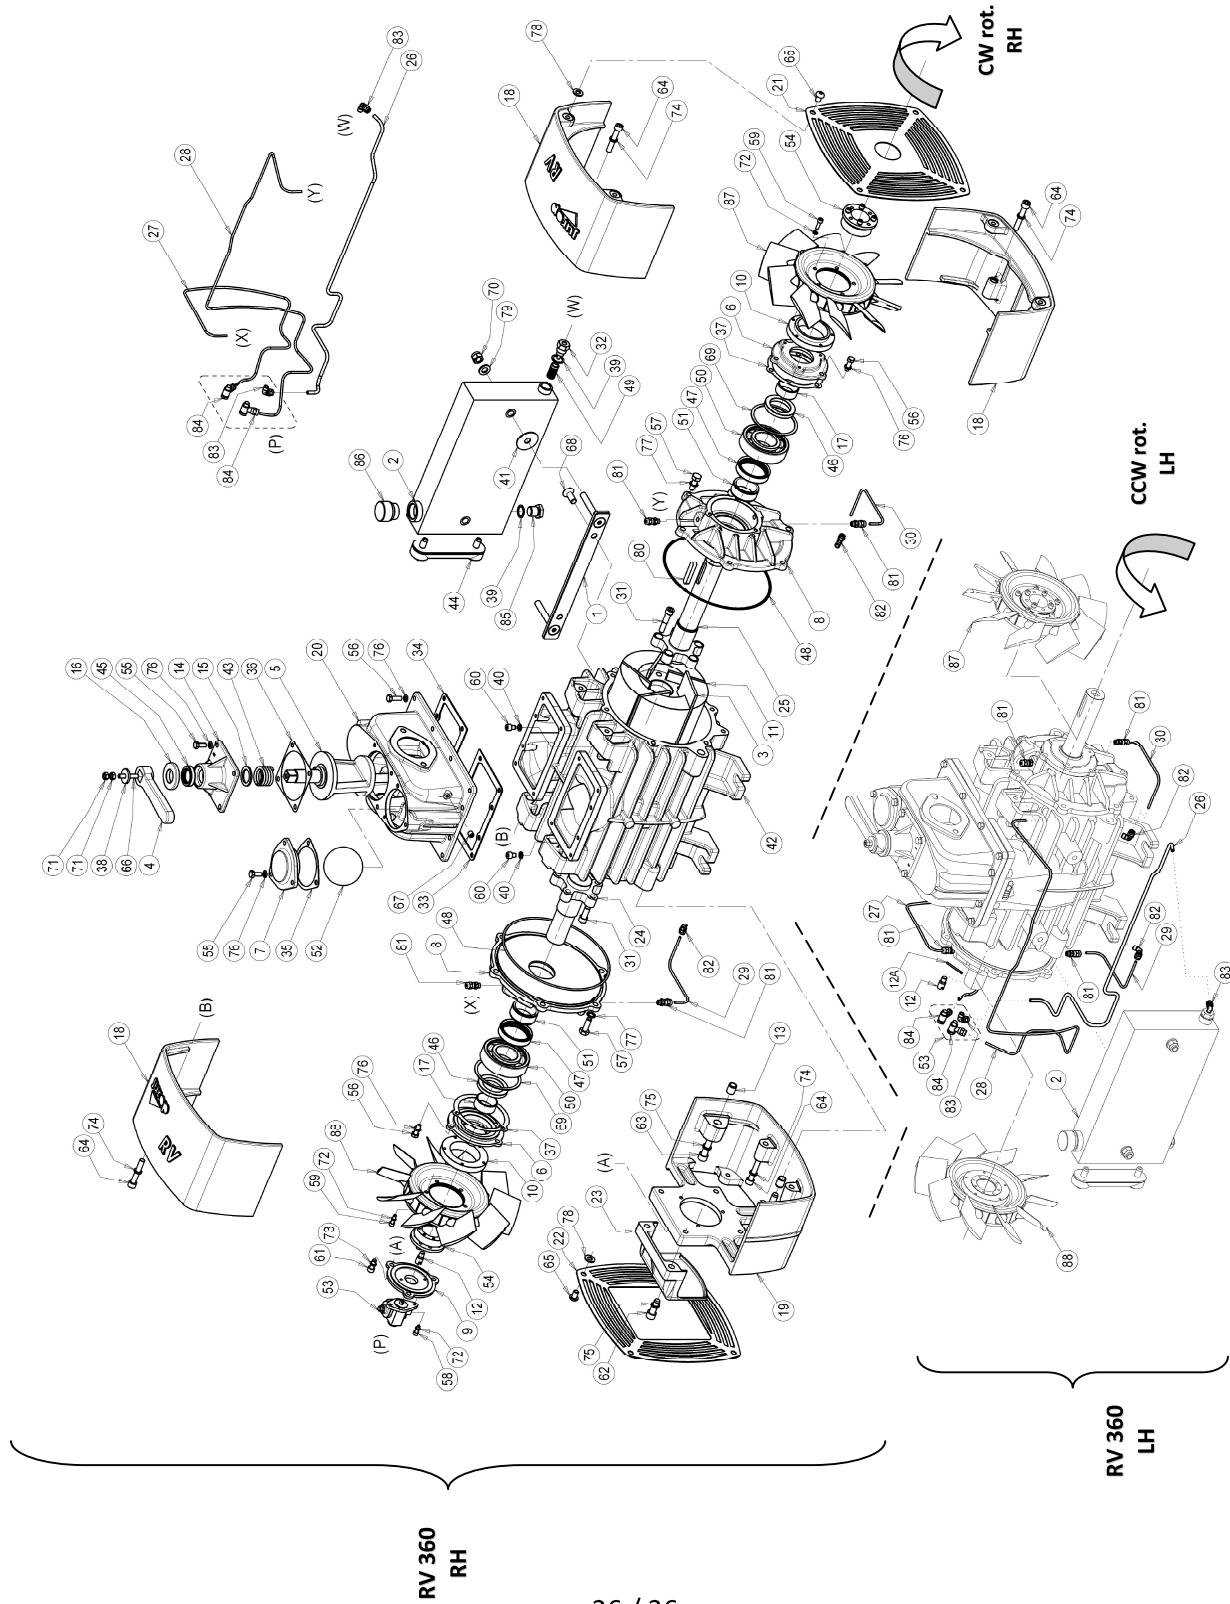

RV 360 SPARE PARTS LIST

Pos.	Code	Description	Pcs	Pos.	Code	Description	Pcs
1	1513053300	RV360 side mounted oil tank support	1	46	4022200044	Seal 65x45x8	2
2	1467000000	Oil tank	1	47	4022200113	Seal 70x55x15 VIT.	2
3	1601605900	RV360 vane	5	48	4022200309	OR 4875 VIT.	2
4	1605500000	Cock handle	1	49	4022300001	Nylon D,6 oil filter	1
5	1608501700	Cock	1	50	4023100047	Bearing 6309/C3	2
6	1610508200	Seal cap	2	51	4023130035	Bushing 55x45x22	2
7	1610510800	4-way manifold cap	1	52	4023250501	Rubber ball D80 NBR	1
8	1610513900	RV flange	2	53	4024251000	2-way RH oil pump	1
9	16105CF2B0	Oil pump flange	1		4024251500 (*)	2-way LH oil pump	1
10	1611001400	RV fan hub	2	54	4025428111	Locking set RCK16 40x65	2
11	1621503500	RV360 rotor	1	55	4026102806	Screw TE 8,8 M8x20 UNI5931 zinc.	7
12	1622002600	Oil pump drive	1	56	4026102807	Screw TE 8,8 M8x25 UNI5931 zinc.	18
12A	4026414617 (*)	Plug 3x40 UNI6873	1	57	4026102908	Screw TE 8,8 M10x30 UNI 5931 zinc.	12
13	1622010200	RV conveyor dowel pin	2	58	4026121305	Screw TCEI 8,8 M6x16 UNI5931 zinc.	2
14	1623100000	Cock cover	1	59	4026121307	Screw TCEI 8,8 M6x20 UNI5931 zinc.	10
15	1624027500	Cock spring spacer	1	60	4026121401	Screw TCEI 8,8 M8x12 UNI5931 zinc.	2
16	1624202300	Cock regulation spacer	1	61	4026121405	Screw TCEI 8,8 M8x20 UNI5931 zinc.	3
17	1626001100	Seal bushing	2	62	4026121710	Screw TCEI 8,8 M12x35 UNI5931 zinc.	2
18	1627105100	RV conveyor	3	63	4026121719	Screw TCEI 8,8 M12x80 UNI5931 zinc.	2
19	1627105200	RV conveyor with support	1	64	4026121815	Screw TCEI 8,8 M10x60 UNI5931 zinc.	8
20	1627505300	Manifold	1	65	4026122005	Screw TBEI 10,9 M10x15 zinc.	8
21	1642008300	Anterior RV conveyor protection	1	66	4026135414	Screw 12,9 M8x45 zinc.	1
22	1642008400	RV conveyor with support protection	1	67	4026135504	Screw 12,9 M10x10 zinc.	1
23	1642100200	Rear oil pump protection	1	68	4026155909	Screw TSPEI 10,9 M12x30 UNI5933 zinc.	2
24	1650022100	Rear RV shaft	1	69	4026300025	Compensation ring LMKAS100C	2
25	1650022200	Anterior RV shaft	1	70	4026305508	Self-locking nut M12	2
26	1663063900	Oil tank RV360 RH suction line	1	71	4026308005	Nut M8 UNI5588 zinc.	2
	1663064000 (*)	Oil tank RV360 LH suction line	1	72	4026350503	Washer grower 6 sq. sec. DIN7980 zinc.	12
27	1663064300	Oil pump – rear flange oil line	1	73	4026350505	Washer grower 8 sq. sec. DIN7980 zinc.	3
28	1663064400	Oil pump – anterior flange RV360 RH	1	74	4026350506	Washer grower 10 sq. sec. DIN 7980 zinc.	8
	1663065000 (*)	Oil pump – anterior flange RV360 LH	1	75	4026350508	Washer grower 12 sq. sec. DIN7980 zinc.	4
29	1663064600	Rear RH/anterior LH RV360 housing oil line	1	76	4026350706	Washer grower 8 flat sec. zinc.	25
	1663064800 (*)	Anterior RH/rear LH RV360 housing oil line	1	77	4026351506	Washer M10 zinc.	12
30	1663064800	Anterior RH/rear LH RV360 housing oil line	1	78	4026357006	Flat washer M10 UNI6592 zinc.	8
	1663064600 (*)	Rear RH/anterior LH RV360 housing oil line	1	79	4026357007	Flat washer M12 UNI6592 zinc.	2
31	1672001600	Special screw TCEI M10x1,5	10	80	4026501006	Tang 12x8x56	1
32	1673001000	Oil filter plug	1	81	4026702000	Univ. dir. connection 4xG1/8	4
33	1680611400	Discharge side manifold gasket	1	82	4026706000	Univ. 90° connection 4xG1/8	2
34	1680611500	Suction side manifold gasket	1	83	4026706003	Univ. 90° connection 6xG1/8	2
35	1680611600	Manifold cap gasket	1	84	4026706101	Turning connection 4xG1/8	2
36	1680700200	Cock cover gasket	1	85	4026904503	Plug M20x1,5	1
37	1680707300	Seal cap gasket	2	86	4026910103	Plug G1	1
38	1685002800	Washer 30x8,5x4 zinc.	1	87	4028360000	Impeller 10/LD/F.F.	1
39	1685100300	Washer D20	2		4028360001 (*)	Impeller 10/RS/F.F.	1
40	1685100800	Washer 8x14x1,5 copper	2	88	4028360001	Impeller 10/RS/F.F.	1
41	1685600200	Washer VULKOLAN 90SH D,47,5x13x2	2		4028360000 (*)	Impeller 10/LD/F.F.	1
42	1687509300	RV360 housing	1				
43	1691000000	Cock spring	1				
44	4022106001	Vertical oil sight	1				
45	4022200030	Seal 41x27x10 GP NBR	1				

(*) for RV 360 LH version

Kit of RV360 gaskets: 1892005900